

NCR 3000 Series

Class	Cl. Num.	Model	Description
3115	3115	3115	NCR SAFARI
3120	3120	3120	NCR NOTEBOOK
3122	3122	3122	SAFARI NSX/20
3123	3123	3123	NCR SLIMLINE NOTEBOOK
3125	3125	3125	NCR NOTEPAD
3130	3130	3130	NCR NOTEPAD
3140	3140	3140	GLOBALYST 130 - NOTEBOOK
3150	3150	3150	NCR NOTEBOOK
3151	3151	3151	GLOBALYST 200 - NOTEBOOK
3152	3152	3152	GLOBALYST 200S - NOTEBOOK
3170	3170	3170	NCR 3170
3180	3180	3180	NCR NOTEBOOK
3181	3181	3181	AT&T NOTEBOOK
3182	3182	3182	GLOBALYST 250 - NOTEBOOK
3215	3215	3215	486SX AT SYSTEM W/KEYBOARD
3220	3220	3220	386SX/20 MC
3225	3225	3225	386SX/33MHZ/ISA
3227	3227	3227	486SX/DX
3228	3228	3228	GLOBALYST 510
3230	3230	3230	486SX/25-33MHZ
3231	3231	3231	486/ 25-66MMHZ
3232	3232	3232	GLOBALYST 515
3238	3238	3238	GLOBALYST 520 PC DX4/100
3240	3240	3240	RETAIL HOSPITALITY PROCESSOR
3246	3246	3246	GLOBALYST 500/550
3248	3248	3248	GLOBALYST 600/620
3249	3249	3249	IDEAL Hardware model
3250	3250	3250	RETAIL HOSPITALITY PROCESSOR
3251	3251	3251	RETAIL HOSPITALITY PROCESSOR
3252	3252	3252	GLOBALYST 580
3253	3253	3253	GLOBALYST 525
3254	3254	3254-2100	486SX-33 Desk Top
3255	3255	3255-6100	486DX/2-66 Tower
3258	3258	3258	Globalyst 720 Pentium
3259	3259	3259-2200-0001	DESKTOP WINDOWS DESKTOP OS
3271	3271	3271-3000-8990	NCR 3271 Processor
3273	3273	3273	DECISION MATE V PC
3274	3274	3274	TABLE TOP PROCESSOR
3275	3275	3275	8150 PROCESSOR
3277	3277	3277	NCR PC4 I
3278	3278	3278-0000-0000	NCR PC710
3279	3279	3279	NCR PC8 PC810 & PC916SX
3284	3284	3284	NCR PC 4
3285	3285	3285	NCR PC 6
3300	3300	3300-0000-0000	STARLAN SERVER
3301	3301	3301	INTERACTV VIDEO SYSTEM
3302	3302	3302	PC286/12/ISA
3304	3304	3304	PC386SX/16/ISA
3306	3306	3306	PC286 II /12 /16 /ISA
3307	3307	3307	PC386SX II /16 /20 /ISA
3314	3314	3314	PC 486-25MHZ/MC
3315	3315	3315	PC 386SX-20/AT
3320	3320	3320	PC 386SX-20/AT

3321	3321	3321	PC 486SX- 20/MC
3325	3325	3325	486 PC Micro channel
3328	3328	3328-3021-0001	486 DX2/66 8MB RAM 540 HDD
3330	3330	3330	486SX-25 MHZ/AT
3331	3331	3331	486 25-50 MHZ/ISA
3333	3333	3333	486 SX 25-50 MHZ/ISA
3335	3335	3335	486/20
3338	3338	3338	Globalyst 530 MiniTower 486DX2-66
3340	3340	3340	PC 486/25
3345	3345	3345	NCR 3345 33/200
3346	3346	3346	GLOBALYST 590
3347	3347	3347	GLOBALYST 575
3348	3348	3348	GLOBALYST 630
3349	3349	3349-0020	GLOBALYST P133/WFN
3350	3350	3350	NCR 3350(486/33)
3355	3355	3355	NCR 3410-486 DX/266
3356	3356	3356	GLOBALYST 600
3358	3358	3358	Globalyst 730 Pentium Pc
3360	3360	3360	DUAL PENTIUM SERVER - 3430
3371	3371	3371	486 SX2/50MHz
3372	3372	3372	486SX2/50MHz
3374	3374	3374	STORES:: PENTIUM
3386	3386	3386	PC916;PC920;PC925
3390	3390	3390-0000-0000	PERSONAL COMPUTER
3392	3392	3392-1075-0001	WORKSTATION
3400	3400	3400	TOWER 1632 (XP)
3401	3401	3401	TOWER 1632 XP EXPANS/CABINET
3404	3404	3404	GLOBALYST S10 MINITOWER
3406	3406	3406	AT&T3406,60MHZ PENTIUM DESKTOP SERVER
3410	3410	3410-0000-0000	NCR 3410 486 50MHZ SERVER - 3355
3411	3411	3411	TOWERVIEW PROCESSOR
3412	3412	3412	X-STATION
3413	3413	3413	X-STATION
3414	3414	3414	X-STATION
3416	3416	3416	PROCESSOR PENTIUM 60 MHZ DESKSIDE SERVER
3420	3420	3420	386SX/MC-16
3421	3421	3421	386SX-MC-20
3422	3422	3422-2300-0001	SYSTEM, S16 MINITOWER, CTO
3426	3426	3426-7500-0001	S26 SERVER
3430	3430	3430	DUAL PENTIUM SERVER - 3360
3431	3431	3431-2000	3430 90MHZ PENTIUM BASE UNIT
3432	3432	3432	486/MCA 20MHZ DESKTOP
3433	3433	3433	486/MCA 33MHZ DESKTOP
3434	3434	3434	486/MCA 33MHZ SERVER
3435	3435	3435	486/MC-50 MULTIPROCESSOR
3437	3437	3437	486/MC-50 UNI-PROCESSOR
3438	3438	3438-1000	GLOBALYST 3438 - CTO
3445	3445	3445-0000-0000	NCR 3445
3446	3446	3446-4000	NCR 4300 4300/S P6
3450	3450	3450	MINI-TOWER MICRO COMPUTER
3455	3455	3455-5206-0002	3455 BASE SYSTEM
3460	3460	3460-0000-0000	TOWER 32/600
3461	3461	3461	TOWER 32/600
3465	3465	3465	TOWER 32/600
3466	3466	3466	TOWER 32/500/700
3467	3467	3467	32/750 TOWER
3470	3470	3470	TOWER 32/400
3471	3471	3471	TOWER 32/400

3475	3475	3475	TOWER 32/450
3476	3476	3476	TOWER 300
3480	3480	3480	TELEPHONE ACCOUNTING SYSTEM
3493	3493	3493	DISK SUBSYSTEM
3498	3498	3498-2244-0001	14" COLOUR MONITOR
3524	3524	3524-3000	SYSTEM 3000
	3550	3550	Server 8 x 486/50 processors MCA
3533	3533	3533	X WORK STATION
3599	3599	3599	10 BASE-2 Term. Server
3600	3600	3600-0000-0000	TOWER 3600 SYSTEM
	3601	3601-1000	TOWER 800 PROCESSOR
3605	3605	3605-2000-0008	TOWER 850 PROCESSOR PACKAGE
3606	3605	3605-0100-0008	TOWER 32/825 SYSTEM
3650	3650	3650-0000-0000	COMTEN SYSTEM
3690	3690	3690-0000-0000	COMTEN SYSTEM
3695	3695	3695-0000-0000	COMTEN SYSTEM
3710	3710	3710	DATA PATHING PROCESSOR
3711	3711	3711	D.P. INDUSTRIAL DISP STATION
3713	3713	3713--311	6386/25 WORKGROUP SYSTEMS WGS CPU 311SFD
3714	3714	3714-7141	PC/WGS ADD-ON HARDWARE IMEC 512
3715	3715	3715-3281	6386DX
3716	3716	3716--002	6386/SX WKGP SYSTEMS CPU 302SFD 40MB HDU
3717	3717	3717--002	6386/25 WKGP SYSTEMS CPU 002SFD 80MB HDU
3718	3718	3718	DATA PATHING TAPE UNIT
3719	3719	3719	COMMUNICATION CONTROLLER
3720	3720	3720	DATA PATHING CDC DISK UNIT
3721	3721	3721	D.P. LINE CONDITIONER
3722	3722	3722-0000-0000	DATA SET ADAPTERS
3723	3723	3723	D.P. SIGNAL CONDITIONER
3724	3724	3724	D.P. ASYNC DATA TRANSLATOR
3725	3725	3725-M401	6386SXPC
3726	3726	3726	STARSERVER EXPANSION
3727	3727	3727-0001	AT&T STARSERVER
3728	3728	3728	INTERFACE CONVERTER
3729	3729	3729	DATA PATHING SDE TERMINAL
3733	3733	3733-0009	NCR 3200 6386SX
3745	3745	3745--001	SAFARI NOTEBOOK
3748	3748	3748-0004	PC/WGS ADD-ON H/WARE 200MB HDU STARSERVER
3750	3750	3750	DATA PATHING PROCESSOR
3751	3751	3751-0000-0000	3751 SYSTEM
3752	3752	3752	DATA PATHING PROCESSOR
3760	3760	3760	D.P. WORKSTATION CONTROLLER
	3800	3800-0100-0000	TOWER 200 PROCESSOR-BASE MODEL
3800	3800	3800-0000-0000	TOWER 3800 SYSTEM
3892	3892	3892	DISK/TAPE/SUBSYSTEM (TOWER)