Getting Started with Your MC-GPIB and the NI-488.2[™] Software for Windows

January 1994 Edition
Part Number 370909A-01

National Instruments Corporate Headquarters

6504 Bridge Point Parkway Austin, TX 78730-5039 (512) 794-0100

Technical support fax: (800) 328-2203

(512) 794-5678

Branch Offices:

Australia (03) 879 9422, Austria (0662) 435986, Belgium 02/757.00.20, Canada (Ontario) (519) 622-9310, Canada (Québec) (514) 694-8521, Denmark 45 76 26 00, Finland (90) 527 2321, France (1) 48 14 24 24, Germany 089/741 31 30, Italy 02/48301892, Japan (03) 3788-1921, Netherlands 03480-33466, Norway 32-848400, Spain (91) 640 0085, Sweden 08-730 49 70, Switzerland 056/20 51 51, U.K. 0635 523545

Limited Warranty

The MC-GPIB hardware is warranted against defects in materials and workmanship for a period of two years from the date of shipment, as evidenced by receipts or other documentation. National Instruments will, at its option, repair or replace equipment that proves to be defective during the warranty period. This warranty includes parts and labor.

The media on which you receive National Instruments software are warranted not to fail to execute programming instructions, due to defects in materials and workmanship, for a period of 90 days from date of shipment, as evidenced by receipts or other documentation. National Instruments will, at its option, repair or replace software media that do not execute programming instructions if National Instruments receives notice of such defects during the warranty period. National Instruments does not warrant that the operation of the software shall be uninterrupted or error free.

A Return Material Authorization (RMA) number must be obtained from the factory and clearly marked on the outside of the package before any equipment will be accepted for warranty work. National Instruments will pay the shipping costs of returning to the owner parts which are covered by warranty.

National Instruments believes that the information in this manual is accurate. The document has been carefully reviewed for technical accuracy. In the event that technical or typographical errors exist, National Instruments reserves the right to make changes to subsequent editions of this document without prior notice to holders of this edition. The reader should consult National Instruments if errors are suspected. In no event shall National Instruments be liable for any damages arising out of or related to this document or the information contained in it.

EXCEPT AS SPECIFIED HEREIN, NATIONAL INSTRUMENTS MAKES NO WARRANTIES, EXPRESS OR IMPLIED, AND SPECIFICALLY DISCLAIMS ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. CUSTOMER'S RIGHT TO RECOVER DAMAGES CAUSED BY FAULT OR NEGLIGENCE ON THE PART OF NATIONAL INSTRUMENTS SHALL BE LIMITED TO THE AMOUNT THERETOFORE PAID BY THE CUSTOMER. NATIONAL INSTRUMENTS WILL NOT BE LIABLE FOR DAMAGES RESULTING FROM LOSS OF DATA, PROFITS, USE OF PRODUCTS, OR INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY THEREOF. This limitation of the liability of National Instruments will apply regardless of the form of action, whether in contract or tort, including negligence. Any action against National Instruments must be brought within one year after the cause of action accrues. National Instruments shall not be liable for any delay in performance due to causes beyond its reasonable control. The warranty provided herein does not cover damages, defects, malfunctions, or service failures caused by owner's failure to follow the National Instruments installation, operation, or maintenance instructions; owner's modification of the product; owner's abuse, misuse, or negligent acts; and power failure or surges, fire, flood, accident, actions of third parties, or other events outside reasonable control.

Copyright

Under the copyright laws, this publication may not be reproduced or transmitted in any form, electronic or mechanical, including photocopying, recording, storing in an information retrieval system, or translating, in whole or in part, without the prior written consent of National Instruments Corporation.

Trademarks

NAT4882 $^{\mathbb{R}}$, NI-488 $^{\mathbb{R}}$, Turbo488 $^{\mathbb{R}}$, and NI-488.2 $^{^{\text{TM}}}$ are trademarks of National Instruments Corporation.

Product and company names listed are trademarks or trade names of their respective companies.

WARNING REGARDING MEDICAL AND CLINICAL USE OF NATIONAL INSTRUMENTS PRODUCTS

National Instruments products are not designed with components and testing intended to ensure a level of reliability suitable for use in treatment and diagnosis of humans. Applications of National Instruments products involving medical or clinical treatment can create a potential for accidental injury caused by product failure, or by errors on the part of the user or application designer. Any use or application of National Instruments products for or involving medical or clinical treatment must be performed by properly trained and qualified medical personnel, and all traditional medical safeguards, equipment, and procedures that are appropriate in the particular situation to prevent serious injury or death should always continue to be used when National Instruments products are being used. National Instruments products are NOT intended to be a substitute for any form of established process, procedure, or equipment used to monitor or safeguard human health and safety in medical or clinical treatment.

FCC/DOC Radio Frequency Interference Compliance

This equipment generates and uses radio frequency energy and, if not installed and used in strict accordance with the instructions in this manual, may cause interference to radio and television reception. This equipment has been tested and found to comply with the following two regulatory agencies:

Federal Communications Commission

This device complies with Part 15 of the Federal Communications Commission (FCC) Rules for a Class B digital device. A Class B device is distinguishable from a Class A device by the appearance of an FCC ID number located on the Class B device.

Canadian Department of Communications

This device complies with the limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications (DOC).

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de classe B prescrites dans le règlement sur le brouillage radioélectrique édicté par le ministère des communications du Canada.

Instructions to Users

These regulations are designed to provide reasonable protection against interference from the equipment to radio and television reception in residential areas.

There is no guarantee that interference will not occur in a particular installation. However, the chances of interference are much less if the equipment is installed and used according to this instruction manual.

If the equipment does cause interference to radio or television reception, which can be determined by turning the equipment on and off, one or more of the following suggestions may reduce or eliminate the problem.

- Operate the equipment and the receiver on different branches of your AC electrical system.
- Move the equipment away from the receiver with which it is interfering.
- Reorient or relocate the receiver's antenna.
- Be sure that the equipment is plugged into a grounded outlet and that the grounding has not been defeated with a cheater plug.

Notice to user: Changes or modifications not expressly approved by National

Instruments could void the user's authority to operate the equipment

under the FCC Rules.

If necessary, consult National Instruments or an experienced radio/television technician for additional suggestions. The following booklet prepared by the FCC may also be helpful: *How to Identify and Resolve Radio-TV Interference Problems*. This booklet is available from the U.S. Government Printing Office, Washington, DC 20402, Stock Number 004-000-00345-4.

Bescheinigung des Herstellers/Importeurs

Hiermit wird bescheinigt, daß die MC-GPIB in Übereinstimmung mit den Bestimmungen der Vfg. 1046/1984 funk-entstört ist.

Der Deutsche Bundespost wurde das Inverkehrbringen dieses Gerätes angezeigt und die Berechtigung zur Überprüfung der Serie auf Bestimmungen eingeräumt.

Contents

About	This Manual	ix
	How to Use the Manual Set	ix
	Organization of This Manual	
	Conventions Used in This Manual	
	Related Documentation	
	Customer Communication	
		_
Chapte	er 1	
	uction	1-1
	How to Use This Manual	
	What You Need to Get Started	
	Hardware Description	
	Software Description	
	Dozen de Dozen partir de la constantina della co	
Chapte	er 2	
	vare Installation and Configuration	2_1
114141	Setting the Shield Ground Configuration (Optional)	
	Install the Hardware	
	Configure the Hardware	
	Comigue de Hadware	2-2
Chapte	er 3	
	re Installation and Configuration	3_1
Doitwa	NI-488.2 Software Components	
	Install the Software	
	Configure the Software with wibconf (Optional)	
	Configure the Software with wiocom (Optional)	3-2
Chapte	or 4	
	ation Verification and Troubleshooting	<i>1</i> 1
mstana		
	Run the Hardware Diagnostic Program ibdiag	
	Troubleshooting ibdiag Error Messages	
	Run the Software Diagnostic Program wibtest	
	Troubleshooting wibtest Error Messages	
	Presence Test of Board	
	Common Questions	
	CONTINUAL CAUCAGORIS	4-4


Contents

Using Your NI-488.2 Software Introduction to wibic General Programming Considerations Appendix A Hardware Specifications Appendix B Customer Communication	5-1 5-1
General Programming Considerations Appendix A Hardware Specifications Appendix B Customer Communication	5-1
Appendix A Hardware Specifications Appendix B Customer Communication	
Hardware Specifications Appendix B Customer Communication	A-1
Customer Communication	
Classow	B-1
Glossary	ilossary-1
Figure	
Figure 2-1. Ground Configuration Jumper Settings	2-1
Tables	
Table A-1. Electrical Characteristics	A-1
Table A-2. Physical Characteristics	Δ-1
Table A-3. Environmental Characteristics	/ X - X

About This Manual

This manual contains instructions for installing and configuring the National Instruments MC-GPIB interface board and the NI-488.2 software for Windows. The interface board is intended for use in personal computers equipped with 16-bit Micro Channel slots. The NI-488.2 software is intended for use with Microsoft Windows version 3.0 or higher. This manual assumes that you are already familiar with the Windows operating system.

How to Use the Manual Set

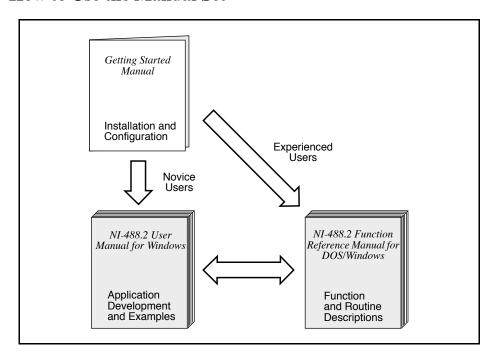

Use this getting started manual (part number 320739-01) to install and configure your GPIB board and NI-488.2 software for Windows.

Use the *NI-488.2 User Manual for Windows* (part number 320701-01) to learn the basics of GPIB and how to develop an application program. The user manual also contains debugging information and detailed examples.

Use the *NI-488.2 Function Reference Manual for DOS/Windows* (part number 320702-01) for specific NI-488 function and NI-488.2 routine information, such as format, parameters, and possible errors.

Organization of This Manual

This manual is organized as follows:

- Chapter 1, Introduction, explains how to use this manual, lists what you need to get started, and includes a brief description of the GPIB board and the NI-488.2 software.
- Chapter 2, Hardware Installation and Configuration, contains instructions for configuring and installing your GPIB board.
- Chapter 3, Software Installation and Configuration, contains instructions for installing and configuring your NI-488.2 software.
- Chapter 4, *Installation Verification and Troubleshooting*, describes how to verify the hardware and software installation and how to troubleshoot problems.
- Chapter 5, Using Your NI-488.2 Software, describes the wibic utility and lists some programming considerations.
- Appendix A, Hardware Specifications, describes the characteristics of the GPIB board and the recommended operating conditions.
- Appendix B, *Customer Communication*, contains forms you can use to request help from National Instruments or to comment on our products and manuals.
- The Glossary contains an alphabetical list and a description of terms used in this
 manual, including abbreviations, acronyms, metric prefixes, mnemonics, and
 symbols.

Conventions Used in This Manual

The following conventions are used in this manual.

Bold text denotes menus, menu items, dialog buttons, or

options.

italic Italic text denotes emphasis, a cross reference, or an

introduction to a key concept.

bold italic Bold italic text denotes a note, caution, or warning.

monospace Text in this font denotes text or characters that are to be

literally input from the keyboard, sections of code,

programming examples, and syntax examples. This font is also used for the proper names of disk drives, directories, programs, subprograms, subroutines, device names, functions,

variables, field names and filenames.

bold monospace	Bold text in this font denotes the messages and responses that the computer automatically prints to the screen.
<>	Angle brackets enclose the name of a key on the keyboard–for example, <pagedown>.</pagedown>
-	A hyphen between two or more key names enclosed in angle brackets denotes that you should simultaneously press the named keys–for example, <control-alt-delete>.</control-alt-delete>
<enter></enter>	Key names are capitalized.
IEEE 488 and IEEE 488.2	IEEE 488 and IEEE 488.2 refer to the ANSI/IEEE Standard 488.1-1987 and the ANSI/IEEE Standard 488.2-1987, respectively, which define the GPIB.

Abbreviations, acronyms, metric prefixes, mnemonics, symbols, and terms are listed in the *Glossary*.

Related Documentation

The following documents contain information that you may find helpful as you read this manual.

- ANSI/IEEE Standard 488.1-1987, IEEE Standard Digital Interface for Programmable Instrumentation
- ANSI/IEEE Standard 488.2-1987, IEEE Standard Codes, Formats, Protocols, and Common Commands
- IBM Personal System/2 Quick Reference Manual
- Microsoft Windows User's Guide, Microsoft Corporation


Customer Communication

National Instruments wants to receive your comments on our products and manuals. We are interested in the applications you develop with our products, and we want to help if you have problems with them. To make it easy for you to contact us, this manual contains comment and configuration forms for you to complete. These forms are in Appendix B, *Customer Communication*, at the end of this manual.

Chapter 1 Introduction

This chapter explains how to use this manual, lists what you need to get started, and includes a brief description of the MC-GPIB board and the NI-488.2 software.

How to Use This Manual

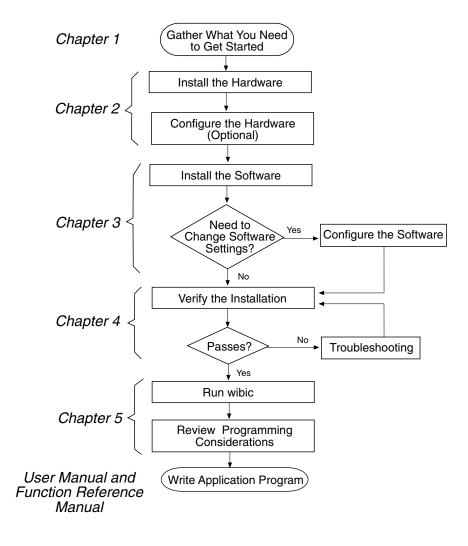

Introduction Chapter 1

MC-GPIB board (part number 181165-01)
or
MC-GPIB board with key (part number 181165-02)
3.5 in. low density (720 KB) <i>NI-488.2 Software for Windows. Distribution Disks for the MC-GPIB</i> (part numbers 413048-99 and 413049-99)
Windows version 3.0 or higher installed on your computer
A blank diskette to use for a backup copy of the IBM PS/2 reference diskette (or your system reference diskette if you have a PS/2-compatible computer)

Hardware Description

What You Need to Get Started

The MC-GPIB board transforms any IBM Personal System/2 (PS/2) or compatible computer equipped with 16-bit Micro Channel slots into a full-functioning Talker/Listener/Controller. The NAT4882 controller chip is fully compatible with the IEEE 488.2 standard. The Turbo488 performance-enhancing ASIC boosts GPIB read and write transfers to rates exceeding 1 Mbytes/s.

You can use standard GPIB cables to connect the MC-GPIB with up to 14 instruments. If you want to use more instruments, you can order a bus extender or expander from National Instruments. Refer to Appendix A, *Hardware Specifications* for more information about the MC-GPIB hardware specifications and operating conditions.

Software Description

The NI-488.2 software for Windows includes a Windows dynamic link library, language interface libraries, and debugging and development utilities. The NI-488.2 software and GPIB hardware transform a general-purpose PC into a GPIB Talker/Listener/Controller that has complete communications and bus management capability.

Chapter 2 Hardware Installation and Configuration

This chapter contains instructions for configuring and installing your MC-GPIB board.

Warning: Several components on your MC-GPIB board can be damaged by electrostatic discharge. To avoid such damage in handling the board, touch the antistatic plastic package to a metal part of your computer chassis before removing the board from the package.

Setting the Shield Ground Configuration (Optional)

The MC-GPIB board is set at the factory with the jumper in place to connect the logic ground of the MC-GPIB board to its shield ground. This configuration minimizes EMI emissions.

Caution: The MC-GPIB board was tested for compliance with FCC standards with the shield ground connected to logic ground. Removing the jumper might cause EMI emissions to exceed any or all of the applicable standards.

If your application requires that logic ground be disconnected from shield ground, follow these steps:

- 1. Locate the jumper W1 on your MC-GPIB board.
- 2. Remove the jumper and place it across only one of the jumper pins as shown in Figure 2-1.

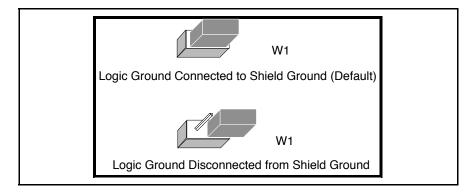


Figure 2-1. Ground Configuration Jumper Settings

3. Record the jumper setting on the *MC-GPIB Hardware and Software Configuration Form* in Appendix B, *Customer Communication*.

Install the Hardware

Before you install the MC-GPIB, make sure you have a backup copy of the PS/2 reference diskette. If you do not have one, you can make one by following the instructions in the *IBM Personal System/2 Quick Reference* manual that came with your PS/2 computer.

Follow these steps to install the MC-GPIB board:

- Turn on your computer with the backup copy of the PS/2 reference diskette already inserted into the diskette driver.
- Select Copy an option diskette to copy the configuration files from your NI-488.2 distribution disk.
- 3. Wait for the reference program to prompt you for the option diskette, then remove the PS/2 diskette and insert the NI-488.2 distribution disk into the diskette drive.
- 4. Remove the NI-488.2 distribution disk when all the files have been copied.
- 5. Turn off your computer. Keep the computer plugged in so that it remains grounded while you install the MC-GPIB board.
- 6. Remove the top or side cover of the system unit.
- 7. Remove the expansion slot cover on the back of the system unit.
- 8. Insert the MC-GPIB board into an unused slot with the GPIB connector sticking out of the opening on the back panel.
- 9. Screw the mounting bracket of the MC-GPIB to the back panel rail of the computer.
- 10. Replace the system cover.

Configure the Hardware

1. Restart your computer with the backup copy of the PS/2 reference diskette inserted into the diskette drive. The reference program asks if you want to automatically configure the computer. Respond by typing a y for yes.

The reference program on the PS/2 diskette automatically configures the hardware by assigning values for the base I/O address, interrupt level, and DMA channel of the interface board.

2. To see what values were assigned by the reference program, select **Set Configuration** from the **Main Menu** and then **View Configuration** from the subsequent **Set Configuration Menu** of the PS/2 reference diskette.

Make sure that the DMA channel the reference program chooses is between 0 and 7. If the program assigns one in the range of 8 to 14, select **Change Configuration** in the reference program and select an unused DMA channel between 0 and 7.

You can use programmed I/O GPIB transfers if you do not want to use DMA for GPIB transfers. If this is the case, run wibconf and select NONE for the DMA channel. You do not need to update the configuration file on the reference diskette. However, you might want to update this file just to remind yourself that you disabled DMA.

The MC-GPIB supports fairness, so the Fairness Enable Field defaults to ON. This setting means that even if the MC-GPIB is using the Micro Channel bus exclusively, it releases control of the bus when another Micro Channel bus master requests to use the bus.

- 3. Remove the PS/2 reference diskette.
- 4. Restart your computer.

After you install the NI-488.2 software, it automatically configures itself to match the hardware settings. If you are installing one MC-GPIB board, the software assigns it as gpib0. If you are installing more than one board, the board in the lowest-numbered slot is gpib0, the board in the next lowest-numbered slot is gpib1, and so on.

Chapter 3 Software Installation and Configuration

This chapter contains instructions for installing and configuring your NI-488.2 software.

NI-488.2 Software Components

The NI-488.2 software includes the following components:

- Device driver
- Hardware and software diagnostic tests
- Configuration utility
- Interactive control program
- Utilities for software development
- Language interface libraries for the following languages Microsoft Visual Basic for Windows, Microsoft C, and Borland C++
- Example programs that use NI-488 functions and NI-488.2 routines

For a detailed list of files, refer to the NI-488.2 User Manual for Windows.

Install the Software

After you have installed and configured the hardware, you are ready to install the NI-488.2 software. Complete the following steps to run the software installation program.

- 1. Insert the NI-488.2 distribution disk into an unused drive.
- Choose Run... from the File menu in the Program Manager window and type the following command into the dialog box:

x:\setup

where x is the letter of the drive containing the distribution disk (usually a or b).

The software installation begins with the following screen:



The interactive Windows setup program takes you through the necessary steps to install the NI-488.2 software. For help during the installation, click on the **Help** button. You can exit the setup at any time by clicking on the **Exit** button. When the installation is complete, restart Windows.

After you have installed your software, you might want to view or modify the driver configuration. Refer to the next section for instructions on running the configuration utility wibconf. If you do not want to run wibconf, refer to Chapter 4, *Installation Verification and Troubleshooting*, for instructions on verifying the hardware and software installation.

Configure the Software with wibconf (Optional)

wibconf is an interactive utility you can use to examine or modify the configuration of the driver. Follow these steps to run wibconf:

- Double-click on the wibconf icon in the GPIB group of the Program Manager. A
 parameters dialog box appears.
- 2. Enter the drive, path, and name that describes the location of the Windows GPIB configuration file gpib.ini in the dialog box, and press <Enter> or click the **OK** button. For example, if you installed Windows on drive c in a directory named windows, then you would enter c:\windows\gpib.ini in the parameters dialog box. Changes made using wibconf are recorded in the gpib.ini file.

- 3. Use the cursor keys to select different fields and view corresponding help information.
- 4. Make any necessary changes.
- 5. Exit wibconf by pressing <Esc> or the function key <F9>, and save your changes.
- 6. Restart Windows.

For more information about wibconf, refer to the NI-488.2 User Manual for Windows.

After the software is installed and configured, you should verify the installation. Refer to Chapter 4, *Installation Verification and Troubleshooting*.

Chapter 4 Installation Verification and Troubleshooting

This chapter describes how to verify the hardware and software installation and how to troubleshoot problems.

Run the Hardware Diagnostic Program ibdiag

To verify and test the hardware installation, run the ibdiag hardware diagnostic program that came with your NI-488.2 software. ibdiag verifies that your hardware is functioning properly and that the configuration of your board does not conflict with anything else in your system.

Follow these steps to run ibdiag:

- 1. Disconnect any GPIB cables.
- 2. Go to the directory where the software is installed (for example, c:\mc-gpibw).
- 3. Enter the following command:

ibdiag

If ibdiag completes with no errors, your hardware is functioning properly. If ibdiag returns an error message, refer to the next section for troubleshooting instructions.

Troubleshooting ibdiag Error Messages

Follow these steps to troubleshoot ibdiag error messages.

- 1. Make sure that there are no base I/O address or DMA channel conflicts in your system. The configuration program on the PS/2 reference diskette warns you if these types of conflicts exist. If conflicts exist, follow these steps:
 - a. Restart your computer using your PS/2 reference diskette.
 - b. Using the PS/2 configuration program, change the base I/O address or DMA channel until the program indicates that no conflicts exist. Then change the interrupt level setting so that interrupts are disabled.
 - c. Save the changes and restart your computer.
 - d. Run ibdiaq again.

If ibdiag fails again, one of the following situations is occurring:

- A GPIB cable is connected to the board. Remove all GPIB cables before running ibdiag again.
- Another board or built-in device in your computer is using the same address space or DMA channel, without reporting its usage. Because of this problem, the PS/2 configuration program is not able to detect conflicts. Repeat this step using a new value for the base I/O address or DMA channel.
- The board is defective or cannot be used in your computer. Complete the *Technical Support Form* in Appendix B, *Customer Communication*, and contact National Instruments.

If ibdiag passes, your base I/O address and DMA channel settings are valid. Continue to Step 2 to verify your interrupt request setting.

- 2. Make sure you are using a valid interrupt request line. The configuration program on the PS/2 reference diskette does *not* warn you about interrupt conflicts. To make sure you are using a valid interrupt request line, follow these steps:
 - a. Restart your computer using your PS/2 reference diskette.
 - b. Using the PS/2 configuration program, change the interrupt level setting so that interrupts are enabled.
 - c. Save the changes and restart your computer.
 - d. Run ibdiaq again.

If ibdiag fails this time, one of the following situations is occurring:

- Another board or built-in device in your computer is using the same interrupt request line. Repeat this step using a new value for the interrupt request line.
- The board is defective or cannot be used in your computer. Complete the *Technical Support Form* in Appendix B, *Customer Communication*, and contact National Instruments.

Run the Software Diagnostic Program wibtest

To verify and test the hardware and software installation, run the wibtest software diagnostic program that came with your NI-488.2 software. The wibtest program is a Windows application that requires no user interaction.

Follow these steps to run wibtest:

- 1. Disconnect any GPIB cables.
- 2. Double-click on the **wibtest** icon in the **GPIB** group in the **Program Manager**.

If wibtest completes with no errors, you have installed the NI-488.2 software correctly. If wibtest returns an error message, refer to the next section for troubleshooting instructions.

Troubleshooting wibtest Error Messages

The following sections explain common error messages generated by wibtest.

The wibtest program locks up your computer if the GPIB board under test is configured to use an incorrect interrupt level. If wibtest locks up, you can either reconfigure the hardware to use a different interrupt level or use wibconf to disable the use of interrupts. For detailed instructions, refer to the section *Configure the Software with wibconf* in Chapter 3, *Software Installation and Configuration*.

Note: In the following paragraphs, gpibx refers to board gpib0, gpib1, gpib2, or gpib3 as appropriate.

Presence Test of Driver

The wibtest program tests for the presence of the NI-488.2 driver gpib.dll and the NI-488.2 configuration information file gpib.ini.

If gpib.dll is not in the Windows directory, a warning box pops up with the following text:

File Error: Cannot find GPIB.DLL

Press the **Close** button. wibtest displays the following error message when it fails:

<<< No driver present for GPIBx. >>>

To correct the problem, make sure that gpib.dll is located in the Windows directory (usually c:\windows).

If gpib.ini is not in the Windows directory, wibtest displays the same error message when it fails:

<< No driver present for GPIBx. >>>

To correct this problem, make sure that gpib.ini is located in the Windows directory (usually c:\windows).

If you are unable to locate gpib.dll or gpib.ini, then you should reinstall the software.

Presence Test of Board

The following error message appears if the board gpibx is not installed or if the software is not configured properly:

```
<<< No board present for GPIBx. >>>
```

If this message appears, you could have one of the following situations:

- The Use this GPIB Interface field in wibconf might be set to no for board gpibx. If you want to use the board, you must set this field to yes.
- The board is not properly installed. Refer to the *Install the Hardware* section in Chapter 2, *Hardware Configuration and Installation*.

GPIB Cables Connected

The following error message appears if a GPIB cable is connected to the board when you run wibtest:

```
Call(25) 'ibcmd " "' failed, ibsta (0x134) not what was expected
(0x8130)
```

Call(25) 'ibcmd " "' failed, expected ibsta (0x100) to have the ERR bit set.

Disconnect all GPIB cables before trying the test again.

Common Questions

Which NI-488.2 software (DOS or Windows) do I need to install?

If you want to run a GPIB application under DOS, install the NI-488.2 software for DOS. If you want to run a GPIB application in Windows, you must install the NI-488.2 software for Windows.

Can I have the NI-488.2 for DOS and Windows drivers installed at the same time?

Yes, there is nothing wrong with installing both. However, it is better not to use them at the same time.

How can I determine which type of GPIB board I have installed?

Run the GPIBInfo utility. If you run GPIBInfo without specifying any parameters, it returns information about the GPIB boards currently configured for use in your system. If you know the base I/O address of a GPIB interface board, you can enter it as a

parameter for specific information. For example, GPIBInfo E00 returns information about the GPIB board at base I/O address E00. For more information about GPIBInfo, refer to the NI-488.2 User Manual for Windows.

How can I determine which version of the NI-488.2 software I have installed?

Run the GPIBInfo utility. If you run GPIBInfo without specifying any parameters, it returns information about the version of the NI-488.2 software currently installed. For more information about GPIBInfo, refer to the NI-488.2 User Manual for Windows.

What should I type into the pop-up window that appears when I start wibconf?

This pop-up window is prompting you for the drive and path where the gpib.ini file is located. If Windows is installed in the default directory (c:\windows), just press <Return>. If Windows is not installed in the default directory, enter the path and directory where Windows is installed so that wibconf can find the correct gpib.ini file to modify. For example, if Windows is installed in the directory d:\win3, type d:\win3\gpib.ini in the pop-up window.

What do I do if ibdiag or wibtest fails with an error?

Refer to the troubleshooting sections of this chapter for specific information about what might cause these tests to fail.

When would I use wibic?

You can use wibic to test and verify instrument communication, troubleshoot problems, and develop your application program. For more information about wibic, refer to Chapter 5, wibic-Windows Interface Bus Interactive Control, in the NI-488.2 User Manual for Windows.

How do I use an NI-488.2 language interface?

For information about using NI-488.2 language interfaces, refer to Chapter 3, *Developing Your Application*, in the *NI-488.2 User Manual for Windows*.

What information should I have before I call National Instruments?

When you call National Instruments, you should have the results of the diagnostic tests ibdiag and wibtest and the output of GPIBInfo. Also, make sure you have filled out the configuration form in Appendix B, *Customer Communication*.

Chapter 5 Using Your NI-488.2 Software

This chapter describes the wibic utility and lists some programming considerations.

Introduction to wibic

You can use wibic, the Windows Interface Bus Interactive Control utility, to enter NI-488 functions and NI-488.2 routines interactively and display the results of the function calls automatically. Without writing an application, you can use wibic to do the following:

- Verify GPIB communication with your device quickly and easily.
- Learn the NI-488 functions and NI-488.2 routines before you write your application.
- Become familiar with the commands of your device.
- Receive data from your GPIB device.
- Learn new NI-488.2 routines before integrating them into your application.
- Troubleshoot problems with your application.

For more information about wibic, refer to the NI-488.2 User Manual for Windows.

General Programming Considerations

As you begin developing your NI-488.2 application, remember the following points:

- You must link the language interface library with your compiled source code.
- You must include the header file in your source code.

For information about choosing a programming method, developing your application, or compiling and linking, refer to the *NI-488.2 User Manual for Windows*. For detailed information about each NI-488 function and NI-488.2 routine, refer to the *NI-488.2 Function Reference Manual for DOS/Windows*.

Appendix A Hardware Specifications

This appendix describes the characteristics of the MC-GPIB board and the recommended operating conditions.

Table A-1. Electrical Characteristics

Characteristic	Specification
Maximum GPIB Transfer Rates (Windows)	
Reads Writes	750 kbytes/s* 1 Mbytes/s*
Power Requirement	+5 VDC 1.0 A Typical 1.6 A Maximum
* Actual speed may vary considerably f instrumentation capabilities.	rom speed shown because of

Table A-2. Physical Characteristics

Characteristic	Specification
Dimensions	8.9 cm by 29.2 cm (3.5 in. by 11.5 in.)
I/O Connector	IEEE 488 Standard 24-pin

Table A-3. Environmental Characteristics

Characteristic	Specification
Operating Environment	
Component Temperature Relative Humidity	0° to 40° C 5% to 90%, noncondensing
Storage Environment	
Temperature Relative Humidity	-20° to 70° C 5% to 90%, noncondensing
EMI	FCC Class B Certified

Appendix B Customer Communication

For your convenience, this appendix contains forms to help you gather the information necessary to help us solve technical problems you might have as well as a form you can use to comment on the product documentation. Filling out a copy of the *Technical Support Form* before contacting National Instruments helps us help you better and faster.

National Instruments provides comprehensive technical assistance around the world. In the U.S. and Canada, applications engineers are available Monday through Friday from 8:00 a.m. to 6:00 p.m. (central time). In other countries, contact the nearest branch office. You may fax questions to us at any time.

Corporate Headquarters

(512) 795-8248

Technical support fax: (800) 328-2203

(512) 794-5678

Branch Offices	Phone Number	Fax Number
Australia	(03) 879 9422	(03) 879 9179
Austria	(0662) 435986	(0662) 437010-19
Belgium	02/757.00.20	02/757.03.11
Denmark	45 76 26 00	45 76 71 11
Finland	(90) 527 2321	(90) 502 2930
France	(1) 48 14 24 00	(1) 48 14 24 14
Germany	089/741 31 30	089/714 60 35
Italy	02/48301892	02/48301915
Japan	(03) 3788-1921	(03) 3788-1923
Netherlands	03480-33466	03480-30673
Norway	32-848400	32-848600
Spain	(91) 640 0085	(91) 640 0533
Sweden	08-730 49 70	08-730 43 70
Switzerland	056/20 51 51	056/20 51 55
U.K.	0635 523545	0635 523154

Technical Support Form

Photocopy this form and update it each time you make changes to your software or hardware, and use the completed copy of this form as a reference for your current configuration. Completing this form accurately before contacting National Instruments for technical support helps our applications engineers answer your questions more efficiently.

If you are using any National Instruments hardware or software products related to this problem, include the configuration forms from their user manuals. Include additional pages if necessary.

Name
Company
Address
Fax () Phone ()
Computer brand
Model Processor
Operating system
SpeedMHz
Display adapter
Mouseno
Other adapters installed
Hard disk capacityMB Brand
Instruments used
National Instruments hardware product model
Revision
Configuration
National Instruments software product
Version
Configuration

(continues)

The problem is
List any error messages
List any circl incisages
The following steps will reproduce the problem
<i>9</i> 1 1 1 ———————————————————————————————

MC-GPIB Hardware and Software Configuration Form

Record the settings and revisions of your hardware and software on the line to the right of each item. Complete a new copy of this form each time you revise your software or hardware configuration, and use this form as a reference for your current configuration. Completing this form accurately before contacting National Instruments for technical support helps our applications engineers answer your questions more efficiently.

MC-GPIB	nstruments Revision			
NI-488.2 S	Software Version	Number on Di	stribution medium	
Programmi	ing Language In	terface Version		
Shield Gro	und Connected	to Logic Ground	(yes or no)	
Board Setti	ings:			
gpib0 gpib1 gpib2 gpib3		Interrupt Level	Channel	
her Pro	ducts			
Computer 1	Make and Mode	1		
Microproce	essor			
Clock Freq	quency			
Type of Me	onitor Card Insta	alled		
Windows V				
Application			IC, C, Pascal, and so or	

•	Other Boards in System
•	Base I/O Address of Other Boards
•	Interrupt Level of Other Boards
•	DMA Channels of Other Boards

Documentation Comment Form

National Instruments encourages you to comment on the documentation supplied with our products. This information helps us provide quality products to meet your needs.

Title:	Getting for Win	Started with Your MC-GPIB and the NI-488.2 [™] Software dows
Edition	Date:	January 1994
Part Nu	mber:	370909A-01
Please o	comment (on the completeness, clarity, and organization of the manual.
		(continues)

If you find	errors in the manual, please record the page numbers and describe the errors.
Thank you	for your help.
Name _	
Title _	
Company	
Address _	
_	
Phone ()
Mail to:	Technical Publications National Instruments Corporation 6504 Bridge Point Parkway, MS 53-02 Austin, TX 78730-5039
Fax to:	Technical Publications National Instruments Corporation MS 53-02 (512) 794-5678

Glossary

Prefix	Meaning	Value
m-	milli-	10 ⁻³
k-	kilo-	10 ³
M-	mega-	10 ⁶

0 degrees % percent amperes Α

ACalternating current

ANSI American National Standards Institute **ASIC** application-specific integrated circuit

Basic Input/Output System **BIOS**

C Celsius

CPU central processing unit dynamic link library DLL **DMA** direct memory access electromagnetic interference **EMI**

Federal Communications Commission **FCC**

General Purpose Interface Bus **GPIB**

hexadecimal hex

Hz hertz

Institute of Electrical and Electronic Engineers **IEEE**

in. inches I/O input/output interrupt request IRO kilobytes of memory KB megabytes of memory MB PC personal computer **RAM** random-access memory

seconds

VDC volts direct current